

Honeycomb Slider Alignment and Drawer will allow you to slide your honeycomb and metal sheet on and off your machine to facilitate cleaning and quick setup for your rotary or taller materials.

Important Notes

Your machine needs to use leg risers to be able to work (two risers are recommended). Pay atention to the corners the back has a stop wall to prevent the honeycom to go to far the extended kit uses a 30mm gap between the honeycombs when 2 are use, use the middle support to they all level. Back stops Use the gap for the metal bed is free. Wetal Plate Gap Metal Plate Gap Honeycomb 1 Honeycomb 1 Honeycomb 2 Honeycomb 2 Honeycomb 1 Honeycomb 2 Honeycom

Front Use the side guides to help you slide the metal sheet and the honeycomb easier. set them close to the back to help with the weight and alignment

